

EN

User manual

Hob

# USER MANUAL

ZGG62414

IE

GB

CY

# ZANUSSI

# Contents


Safety information	2	Care and cleaning	7
Safety instructions	3	Troubleshooting	7
Product description	5	Installation	9
Daily use	5	Technical information	13
Helpful hints and tips	6	Environment concerns	14

Subject to change without notice.

## Safety information

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damages. Always keep the instructions with the appliance for future reference.

### Children and vulnerable people safety

-  **Warning!** Risk of suffocation, injury or permanent disability.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they are supervised by an adult or a person who is responsible for their safety.
  - Do not let children play with the appliance.
  - Keep all packaging away from children.
  - Keep children and pets away from the appliance when it operates or when it cools down. Accessible parts are hot.
  - If the appliance has a child safety device, we recommend that you activate it.
  - Cleaning and user maintenance shall not be made by children without supervision.

### General Safety

- The appliance and its accessible parts become hot during use. Do not touch the heating elements.
- Do not operate the appliance by means of an external timer or separate remote-control system.

- Unattended cooking on a hob with fat or oil can be dangerous and may result in fire.
- Never try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.
- Do not store items on the cooking surfaces.
- Do not use a steam cleaner to clean the appliance.
- Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.



## Safety instructions

### Installation



**Warning!** Only a qualified person must install this appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Obey the installation instruction supplied with the appliance.
- Keep the minimum distance from the other appliances and units.
- Always be careful when you move the appliance because it is heavy. Always wear safety gloves.
- Seal the cut surfaces with a sealant to prevent moisture to cause swelling.
- Protect the bottom of the appliance from steam and moisture.
- Do not install the appliance adjacent to a door or under a window. This prevents hot cookware to fall from the appliance when the door or the window is opened.
- If the appliance is installed above drawers make sure that the space, between the bottom of the appliance and the upper drawer, is sufficient for air circulation.
- The bottom of the appliance can get hot. We recommend to install a non-combustible separation panel under the appliance to prevent access to the bottom.

### Electrical connection



**Warning!** Risk of fire and electrical shock.


- All electrical connections must be made by a qualified electrician.
- The appliance must be earthed.
- Before carrying out any operation make sure that the appliance is disconnected from the power supply.
- Use the correct electricity mains cable.
- Do not let the electricity mains cable tangle.
- Make sure the mains cable or plug (if applicable) does not touch the hot appliance or hot cookware, when you connect the appliance to the near sockets
- Make sure the appliance is installed correctly. Loose and incorrect electricity mains cable or plug (if applicable) can make the terminal become too hot.
- Make sure that a shock protection is installed.
- Use the strain relief clamp on cable.
- Make sure not to cause damage to the mains plug (if applicable) or to the mains cable. Contact the Service or an electrician to change a damaged mains cable.
- The electrical installation must have an isolation device which lets you disconnect the appliance from the mains at all poles. The isolation device must have a contact opening width of minimum 3 mm.
- Use only correct isolation devices: line protecting cut-outs, fuses (screw type fuses re-

moved from the holder), earth leakage trips and contactors.


## Gas connection

- All gas connections should be made by a qualified person.
- Make sure that there is air circulation around the appliance.
- The information about the gas supply is on the rating plate.
- This appliance is not connected to a device, which evacuates the products of combustion. Make sure to connect the appliance according to current installation regulations. Pay attention to requirements regarding adequate ventilation.


## Use

 **Warning!** Risk of injury, burns or electric shock.

- Use this appliance in a household environment.
- Do not change the specification of this appliance.
- Do not let the appliance stay unattended during operation.
- Do not operate the appliance with wet hands or when it has contact with water.
- Do not put cutlery or saucepan lids on the cooking zones. They become hot.
- Set the cooking zone to "off" after use.


 **Warning!** Risk of fire or explosion.

- Fats and oil when heated can release flammable vapours. Keep flames or heated objects away from fats and oils when you cook with them.
- The vapours that very hot oil releases can cause spontaneous combustion
- Used oil, that can contain food remnants, can cause fire at a lower temperature than oil used for the first time.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.

 **Warning!** Risk of damage to the appliance.

- Do not keep hot cookware on the control panel.
- Do not let cookware to boil dry.
- Do not activate the cooking zones with empty cookware or without cookware.
- Be careful not to let objects or cookware fall on the appliance. The surface can be damaged.
- Do not put aluminium foil on the appliance.
- Do not let acid liquids, for example vinegar, lemon juice or limescale remover touch the hob. This can cause matt patches.
- Provide good ventilation in the room where the appliance is installed.
- Make sure that the ventilation openings are not blocked.
- Use only stable cookware with the correct shape and diameter larger than the dimensions of the burners. There is a risk of overheating and rupture of the glass plate (if applicable).
- Make sure the flame does not go out when you quickly turn the knob from the maximum to the minimum position.
- Make sure pots are centrally positioned on the rings and do not stick out over edges of the cooking surface.
- Use only the accessories supplied with the appliance.
- Do not install a flame diffuser on the burner.


## Care and Cleaning

 **Warning!** Risk of damage to the appliance.

- Clean regularly the appliance to prevent the deterioration of the surface material.
- Do not use water spray and steam to clean the appliance.
- Do not clean the burners in the dishwasher.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.

# Product description

## Cooking surface layout

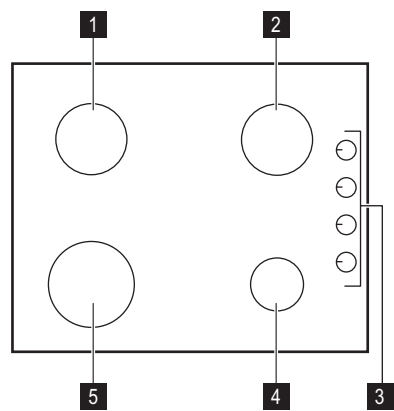

- 1 Semi-rapid burner
- 2 Semi-rapid burner
- 3 Control knobs
- 4 Auxiliary burner
- 5 Rapid burner

## Control knobs

Symbol	Description
	no gas supply / off position

Symbol	Description
	ignition position / maximum gas supply
	minimum gas supply

## Daily use

**Warning!** Refer to the Safety chapters.

### Ignition of the burner

**Warning!** Be very careful when you use open fire in kitchen environment.


Manufacturer decline any responsibility in case misuse of the flame

Always light the burner before you put cookware.

To light the burner:

1. Turn the control knob counterclockwise to the maximum position ( ) and push it down.
2. Keep the control knob pushed for approximately 5 seconds; this will let thermocou-

- ple to warm up. If not, the gas supply will be interrupted.
3. Adjust the flame after it is regular.
- If after some tries the burner does not light, check if the crown and its cap are in correct positions.

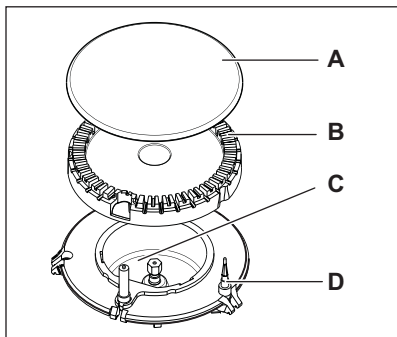

- A) Burner cap
- B) Burner crown
- C) Ignition candle
- D) Thermocouple

**Warning!** Do not keep the control knob pushed for more than 15 seconds.

If the burner does not light after 15 seconds, release the control knob, turn it into off position and try to light the burner again after minimum 1 minute.

## Helpful hints and tips

**Warning!** Refer to the Safety chapters.

### Energy savings

- If possible, always put the lids on the pans.
- When the liquid starts to boil, turn down the flame to barely simmer the liquid.

Use cookware with diameters applicable to the size of burners.

Burner	Diameters of cookware
Rapid	180 - 260 mm
Semi-rapid	120 - 220 mm
Auxiliary	80 - 160 mm

**Warning!** Make sure that the bottoms of pots do not stand above the control knobs. If the control knobs are under the bottoms of pots, the flame heats them up. Do not put the same pan on two burners.

**Important!** In the absence of electricity you can ignite the burner without electrical device; in this case approach the burner with a flame, push the relevant knob down and turn it counter-clockwise to maximum gas release position.


**i** If the burner accidentally goes out, turn the control knob to the off position and try to light the burner again after minimum 1 minute.

**i** The spark generator can start automatically when you switch on the mains, after installation or a power cut. It is normal.

### Turning the burner off

To put the flame out, turn the knob to the symbol ●.

**Warning!** Always turn the flame down or switch it off before you remove the pans from the burner.

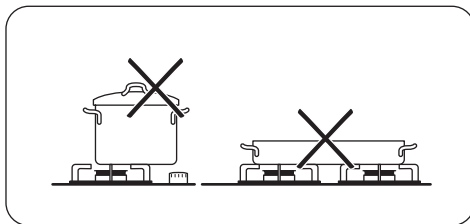


**Warning!** Make sure that pot handles is not above the front edge of the cooktop.


Make sure that pots are centrally put on the rings in order to get maximum stability and to get lower gas consumption.


Do not put unstable or damaged pots on the rings to prevent from spill and injury.

**Warning!** Do not use a flame diffuser.

# Care and cleaning

 **Warning!** Refer to the Safety chapters.

 **Warning!** Deactivate the appliance and let it cool down before you clean it.  
Disconnect the appliance from the electrical supply before you do cleaning or maintenance work.

 Scratches or dark stains on the surface have no effect on how the appliance operates.

- You can remove the pan supports to easily clean the hob.
- To clean the enamelled parts, cap and crown, wash them with warm soapy water and dry them carefully before you put them back.
- Wash stainless steel parts with water, and then dry them with a soft cloth.
- The pan supports **are not** dishwasher proof. They must be washed **by hand**.
- When you wash the pan supports by hand, take care when you dry them as the enamelling process occasionally leaves rough edges. If necessary, remove stubborn stains using a paste cleaner.
- Make sure you position the pan supports correctly after cleaning.
- To make the burners work correctly, make sure that the arms of the pan supports are in the centre of the burner.

- **Be very careful when you replace the pan supports to prevent the hob top from damage.**

After cleaning, dry the appliance with a soft cloth.

## Removing the dirt:

1. – **Remove immediately:** melting plastic, plastic foil, and food containing sugar.  
– **Stop the appliance and let it cool down** before you clean: limescale rings, water rings, fat stains, shiny metallic discolorations. Use a special cleaner applicable for surface of hob.
2. Clean the appliance with a damp cloth and some detergent.
3. At the end **rub the appliance dry with a clean cloth.**

The stainless steel can become tarnished if it is too much heated. Refer to this you must not cook with potstones, earthenware pans or cast iron plates.

## Cleaning of the spark plug

This feature is obtained through a ceramic ignition candle with a metal electrode. Keep these components well clean to prevent difficult lighting and check that the burner crown holes are not obstructed.

## Periodic maintenance

Periodically speak your local Service Force Centre to check the conditions of the gas supply pipe and the pressure adjuster, if fitted.

# Troubleshooting

Problem	Possible cause	Remedy
There is no spark when lighting the gas	<ul style="list-style-type: none"><li>▪ There is no electrical supply</li></ul>	<ul style="list-style-type: none"><li>▪ Make sure that the unit is connected and the electrical supply is switched on.</li><li>▪ Control the fuse. If the fuse is released more than one time, refer to a qualified electrician.</li></ul>

Problem	Possible cause	Remedy
	<ul style="list-style-type: none"> <li>▪ Burner cap and crown are placed uneven</li> </ul>	<ul style="list-style-type: none"> <li>▪ Make sure that the burner cap and crown are in correct positions.</li> </ul>
The flame is blow out immediately after ignition	<ul style="list-style-type: none"> <li>▪ Thermocouple is not heated sufficient</li> </ul>	<ul style="list-style-type: none"> <li>▪ After lightning the flame, keep the knob pushed for approximately 5 seconds.</li> </ul>
The gas ring burns unevenly	<ul style="list-style-type: none"> <li>▪ Burner crown is blocked with food residues</li> </ul>	<ul style="list-style-type: none"> <li>▪ Make sure that the injector is not blocked and the burner crown is clear of food particles.</li> </ul>

If there is a fault, first try to find a solution to the problem yourself. If you cannot find a solution to the problem yourself, speak your dealer or the local Service Force Centre.

**i** If you operated the appliance incorrectly, or the installation was not carried out by a registered engineer, the visit from the customer service technician or dealer may not take place free of charge, even during the warranty period.


**These data are necessary to help you quickly and correctly. These data are available on the supplied rating plate.**

- Model description .....

- Product number (PNC) .....
  - Serial Number (S.N.) .....
- Use the original spare parts only. They are available at Service Force Centre and approved spare parts shops.

**Labels supplied with the accessories bag**

Stick the adhesive labels as indicated below:

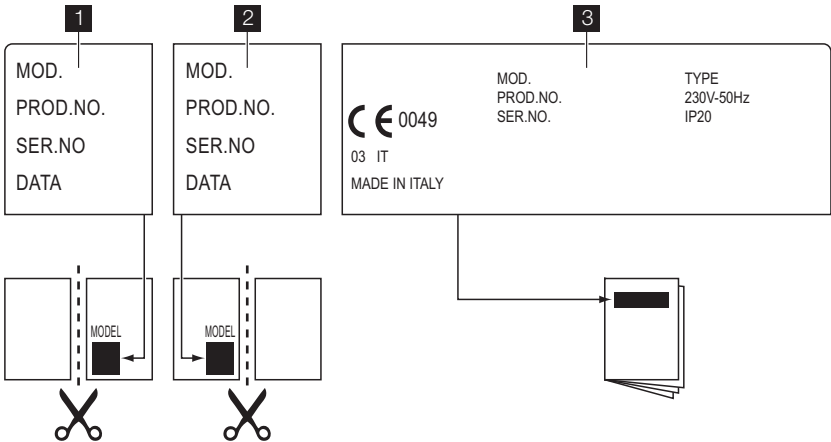



- 1** Stick it on Guarantee Card and send this part
- 2** Stick it on Guarantee Card and keep this part


- 3** Stick it on instruction booklet



# Installation

 **Warning!** Refer to the Safety chapters.

 **Warning!** The gas settings of this appliance are not applicable for Cyprus. If you install this appliance in Cyprus, you must change the nozzles before you connect the appliance. To change the nozzles refer to the type of gas used. See the tables in the "Technical Information" chapter for more information.

 **Warning!** The following instructions about installation, connection and maintenance must be carried out by qualified personnel in compliance with standards and local regulations in force.

## Important safety requirements

This hob must be installed in accordance with the Gas Safety (Installation and Use) Regulations (Current Edition) and the IEE Wiring Regulations (Current Edition).

For appliances installed in the Republic of Ireland please refer to NSAI- Domestic Gas Installation I.S. 813 Current Editions and the ET-CI Rules for Electrical Installations.

## Provision for ventilation

Detailed recommendations are contained in the following British Standards Codes Of Practice: B.S. 6172/ B.S. 5440, Par. 2 and B.S. 6891 Current Editions.

The hob should not be installed in a bed sitting room with a volume of less than 20 m<sup>3</sup>. If it is installed in a room of volume less than 5 m<sup>3</sup> an air vent of effective area of 100 cm<sup>2</sup> is required. If it is installed in a room of volume between 5 m<sup>3</sup> and 10 m<sup>3</sup> an air vent of effective area of 50 cm<sup>2</sup> is required, while if the volume exceeds 11 m<sup>3</sup> no air vent is required.

However, if the room has a door which opens directly to the outside no air vent is required even if the volume is between 5 m<sup>3</sup> and 11 m<sup>3</sup>. If there are other fuel burning appliances in the same room, B.S. 5440 Part 2 Current Edition,

should be consulted to determine the requisite air vent requirements.

For appliances installed in the Republic of Ireland please refer to the NSAI- Domestic Gas Installation I.S. 813 Current Editions Table Four.


## Location

The hob may be located in a kitchen, a kitchen/diner or bed sitting room (with a volume greater than 20 m<sup>3</sup>), but not in a bathroom or shower room.

The minimum distance combustible material can be fitted above the hob in line with the edges of the hob is 400 mm. If it is fitted below 400 mm a space of 50 mm must be allowed from the edges of the hob.

For appliances installed in the Republic of Ireland please refer to NSAI- Domestic Gas Installation I.S. 813 Current Edition Section 7- Permitted Locations of Appliance.


## Gas Connection

 **Warning!** Any gas installation must be carried out by a GAS SAFE REGISTER installer.

Make sure that, once the hob is installed, it is easily accessible for the engineer in the event of a breakdown.

The manufacturer will not accept liability, should the above instructions or any of the other safety instructions incorporated in this instruction booklet be ignored.

On the end of the shaft, which includes the G 1/2" threaded elbow, adjustment is fixed so that the washer is fitted between the components as shown in the diagram. Screw the parts together without using excessive force.

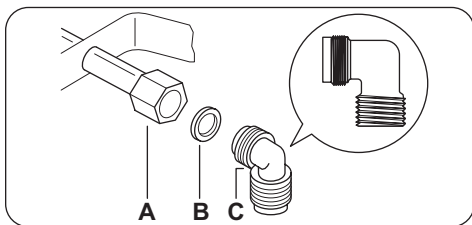

A) End of shaft with nut

B) Washer

C) Elbow

Connection to the gas supply should be with either rigid or semi-rigid pipe, i.e. steel or copper.

The connection should be suitable for connecting to R 1/2 (1/2 BSP male thread).

When the final connection has been made, it is essential that a thorough leak test is carried out on the hob and installation.

Make sure that the main connection pipe does not exert any strain on the hob.

If you use flexible metal pipes make sure that they agree to ISO 10380 and ISO 10807 standards. Be careful they do not come in touch with mobile parts or they are not squeezed. Also be careful when the hob is put together with an oven.

**Important!** It is important to install the elbow correctly, with the shoulder on the end of the thread, fitted to the hob connecting pipe.

**Important!** Failure to ensure the correct assembly will cause leakage of gas.

**Important!** Make sure that the gas supply pressure of the appliance obeys the recommended values.

### Rigid connection:

Carry out connection by using metal rigid pipes (copper with mechanical end).

### Injectors replacement

1. Remove the pan supports.
2. Remove the caps and crowns of the burner.


3. With a socket spanner 7 remove the injectors and replace them with the ones which are necessary for the type of gas you use (see table in "Technical Information" chapter).
4. Assemble the parts, follow the same procedure backwards.
5. Replace the rating plate (it is near the gas supply pipe) with the one for the new type of gas supply. You can find this plate in the package supplied with the appliance.

If the supply gas pressure is changeable or different from the necessary pressure, you must fit an applicable pressure adjuster on the gas supply pipe.

### Adjustment of minimum level

To adjust the minimum level of the burners:

1. Light the burner.
2. Turn the knob on the minimum position.
3. Remove the knob.
4. With a thin screwdriver, adjust the by-pass screw position.

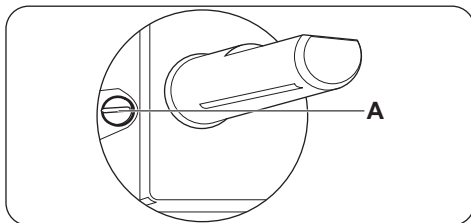

A) The by-pass screw

- If you change from natural gas G20 20 mbar to liquid gas, fully tighten the adjustment screw in.
- If you change from liquid gas to natural gas G20 20 mbar, undo the by-pass screw approximately 1/4 of a turn.

**Warning!** Make sure the flame does not go out when you quickly turn the knob from the maximum position to the minimum position.


### Electrical connection

- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.

- The appliance must not be connected with an extension cable, an adapter or a multiple socket. There is a risk of fire.
- Do not let the power cable to heat up to a temperature of more than 90° C. The cable should be guided by means of clamps fixed to the side of the cabinet, in order to avoid any contact with the equipment beneath the cooktop.
- Make sure that there is access to the mains plug after the installation.

## Electrical Requirements


Permanent electrical installation must agree with the latest I.E.E. Regulations and local Electricity Board regulations. For your own safety the installation must be done by a qualified electrician (e.g. your local Electricity Board, or a contractor who is on the roll of the National Inspection Council for Electrical Installation Contracting [NICEIC]).

** The manufacturer refuses to be held responsible, if these safety measures are not abided by.**

### Supply connections:

This hob has to be connected to 230 — 240 V (50 Hz) electricity supply.


### The hob has a terminal block which is marked as follows:

- **L** — Live terminal
- **N** — Neutral terminal
-  or **E** — Earth terminal

Before carrying out the connection, make sure:

1. The limiter valve and the electrical system can take the appliance load (see the rating plate)
2. The supply system is equipped with an efficient earth connection in compliance with the current standards and regulations
3. The outlet or omnipolar switch used for connection is easily accessible with the appliance installed.

The appliance is supplied with a 3 core flexible powercable with a 3 amp plug. If it is necessary to change the fuse, use a 3 amp ASTA-approved (BS 1362) fuse.

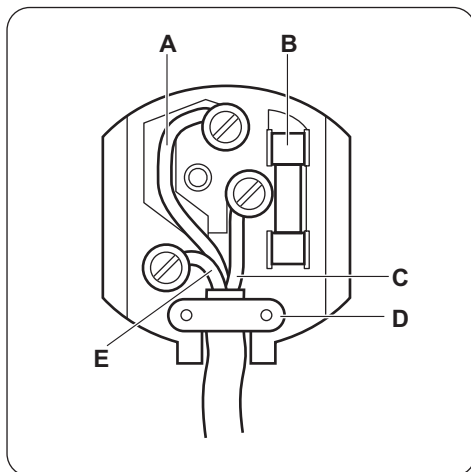

A) Green and Yellow

B) 3 amp fuse

C) Brown

D) Cord clamp

E) Blue


The wires in the cord are coloured as follows:

Green and yellow - Earth

Blue - Neutral


Brown - Live

### Replacement of the connection cable

1. Connect the green and yellow (earth) wire to the terminal which is marked with the letter 'E', or the earth symbol , or coloured green and yellow.
2. Connect the blue (neutral) wire to the terminal which is marked with the letter 'N' or coloured blue.
3. Connect the brown (live) wire to the terminal which is marked with the letter 'L'. It must always be connected to the network phase.

There must be no cut or stray strands of wire present. The cord clamp must be correctly attached to the outer sheath.

**i** To replace the connection cable use only H05V2V2-F T90 or equivalent type. Make sure that the cable section is applicable to the voltage load and the working temperature. The yellow/green earth wire (B) must be approximately 2 cm longer than the live and neutral wire (A).

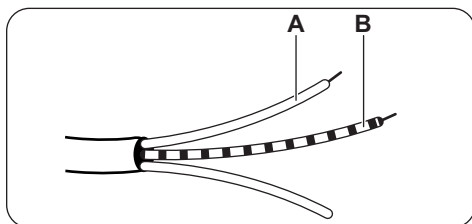



**Warning!** A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely.

**Important!** The replacement of electric cable must be carried out exclusively by the service force centre or by personnel with similar competencies, in accordance with the current regulations.

### Replacement of the connection cable

To replace the connection cable use only H05V2V2-F T90 or equivalent type. Make sure that the cable section is applicable to the voltage and the working temperature. The yellow/green earth wire must be approximately 2 cm longer than the brown (or black) phase wire.

### Building In

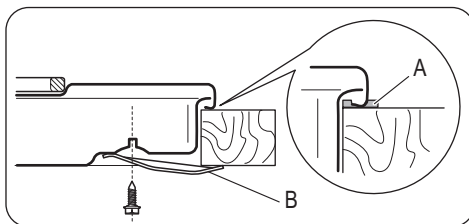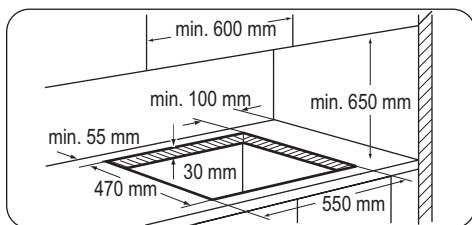


- A) supplied seal
- B) supplied brackets

**Caution!** Install the appliance only on a worktop with flat surface.

### Possibilities for insertion

#### Kitchen unit with door


The panel installed below the hob must be easy to remove and let an easy access in case a technical assistance intervention is necessary.

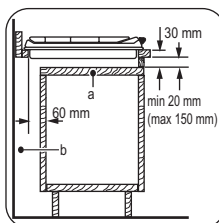

- a) Removable panel
- b) Space for connections

#### Kitchen unit with oven

The hob recess dimensions must obey the indication and the kitchen unit must be equipped with vents to let a continuous supply of air. The electrical connection of the hob and the oven must be installed separately for safety reasons and to let easy remove oven from the unit.

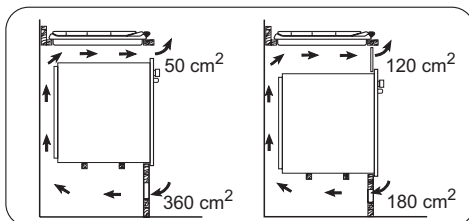

# Technical information

## Hob dimensions

Width:	580 mm
Length:	500 mm

## Hob recess dimensions

Width:	550 mm
Length:	470 mm

## Heat input

Rapid burner:	3.0 kW
Semi-rapid burner:	2.0 kW
Auxiliary burner:	1.0 kW
TOTAL POWER:	G20 (2H) 20 mbar = 8 kW G30 (3+) 28-30 mbar = 567 g/h G31 (3+) 37 mbar = 557 g/h G30/G31 (3B/P) 30/30 mbar = 567 g/h
Electric supply:	230 V ~ 50 Hz 3 core flexible cable with non rewirable plug fitted with a 3 amp car-tridge fuse
Gas connection:	R 1/2 "
Category:	II2H3+ (Great Britain, Ireland) I3B/P (Cyprus)
Gas supply:	G20 (2H) 20 mbar
Appliance class:	3

## By-pass diameters

Burner	Ø By-pass in 1/100 mm	Burner	Ø By-pass in 1/100 mm
Auxiliary	28	Rapid	42
Semi-rapid	32		

## Gas burners


BURNER	NORMAL POWER  kW	RE- DUCED POWER  kW	NORMAL POWER				
			NATURAL GAS G20 (2H) 20 mbar		LPG (Butane/Propane) G30/G31 (3+) 28-30/37 mbar		
			inj. 1/100 mm	m³/h	inj. 1/100 mm	G30 28-30 mbar g/h	G31 37 mbar g/h
Auxiliary	1.0	0.33	70	0.095	50	73	71
Semi-rapid	2.0	0.45	96	0.190	71	145	143

BURNER	NORMAL POWER  kW	RE-DUCED POWER  kW	NORMAL POWER				
			NATURAL GAS G20 (2H) 20 mbar		LPG (Butane/Propane) G30/G31 (3+) 28-30/37 mbar		
			inj. 1/100 mm	m³/h	inj. 1/100 mm	G30 28-30 mbar g/h	G31 37 mbar g/h
Rapid	3.0 (natural gas) 2.8 (LPG)	0.75	119	0.286	86	204	200

## Gas burners for LPG G30/G31 30/30 mbar - only Cyprus


BURNER	NORMAL POWER kW	inj. 1/100 mm
Auxiliary	1.0	50
Semi-rapid	2.0	71
Rapid	2.8	86

## Environment concerns

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed

information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

### Packaging material

 The packaging materials are friendly to the environment and can be recycled. The plastic components are identified by marking: >PE<, >PS<, etc. Discard the packaging materials as household waste at the waste disposal facilities in your municipality.

This image shows a single sheet of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page. There are approximately 20 lines visible. The paper has a slight shadow on the right side, suggesting it's resting on a surface. There is no handwriting or other markings on the paper.



[www.zanussi.com/shop](http://www.zanussi.com/shop)



397226001-B-392012